




MANUFACTURING | AUTOMATION | CALIBRATION

+91 9082554415 / 9022709337

info@preciseequipments.com

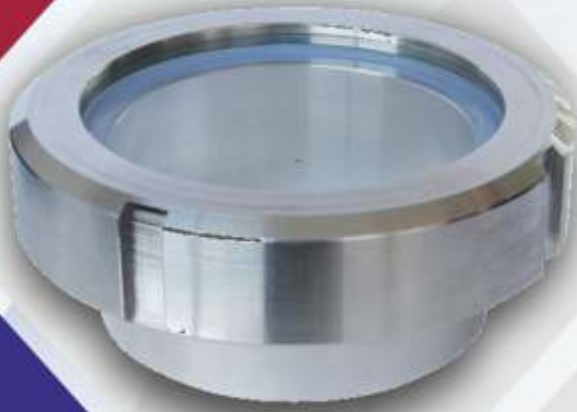

- ✓ Double Window Sight Glass
- ✓ Full View Sight Glass
- ✓ Circular Pad Type Sight Glass
- ✓ Rectangular Pad Type Sight Glass
- ✓ Sight Glass With Wiper
- ✓ Sms Union Sight Glass

HIGH QUALITY SIGHT GLASS FOR YOUR
WORLD CLASS EQUIPMENT

www.preciseequipments.com



RECTANGULAR PAD TYPE SIGHT GLASS

The base flange of the sight glass unit is welded into or onto the vessel wall; the glass plate with gasket either side is firmly held in place by bolted on cover flange.

• **Application:**

For viewing the internals of pipelines, containers, pressure vessels, reactors, silos etc. used principally as a liquid level indicator

• **Operating pressure:**

Pressure 16 bar
Vacuum

NB: Before putting the fitting into operation, the strength of the cutout reinforcement in combination with the vessel wall

• **Operating temperature:**

100°C when using soda lime glass, DIN 8903
243°C when using borosilicate glass, DIN 7081

These temperatures refer to unprotected glass (i. e. without mica protective sheet).



Complete assembly rectangular sight glass

• **Parts and available materials** in explosion drawing on the right:


item	parts	material options
1	base frame	carbon steel/stainless steel
2	seal	Neoprene; PTFE
3	sight glass plate	-soda lime glass: thermally prestressed, DIN 8903, max 100°C -borosilicate glass: thermally prestressed, DIN 7081, max 243°C
4	cover frame	Milled steel stainless steel
5	securing bolts	carbon steel 8.8 or stainless steel A4

• **Assembly:**

Prior to assembling check the base flange (1) to ensure that the seating for the glass is flat and free from any distortion resulting from welding into/onto the vessel wall. Any distortion or uneven spots can lead to leakage or even breakage of the glass when cover flange is tightened down.


After the base flange (1) is welded correctly, place glass (3) gaskets (2) and cover frame (4) in the order shown in adjoining illustration into the recess of base flange (1) and locate with bolts (5) ensuring all is properly seated when bolts are handtight.

Progressively and carefully tighten down cover flange commencing with bolts in middle of flange and working outwards in crosswise alternating sequence (refer to sequence numbers 1-14 in illustration).

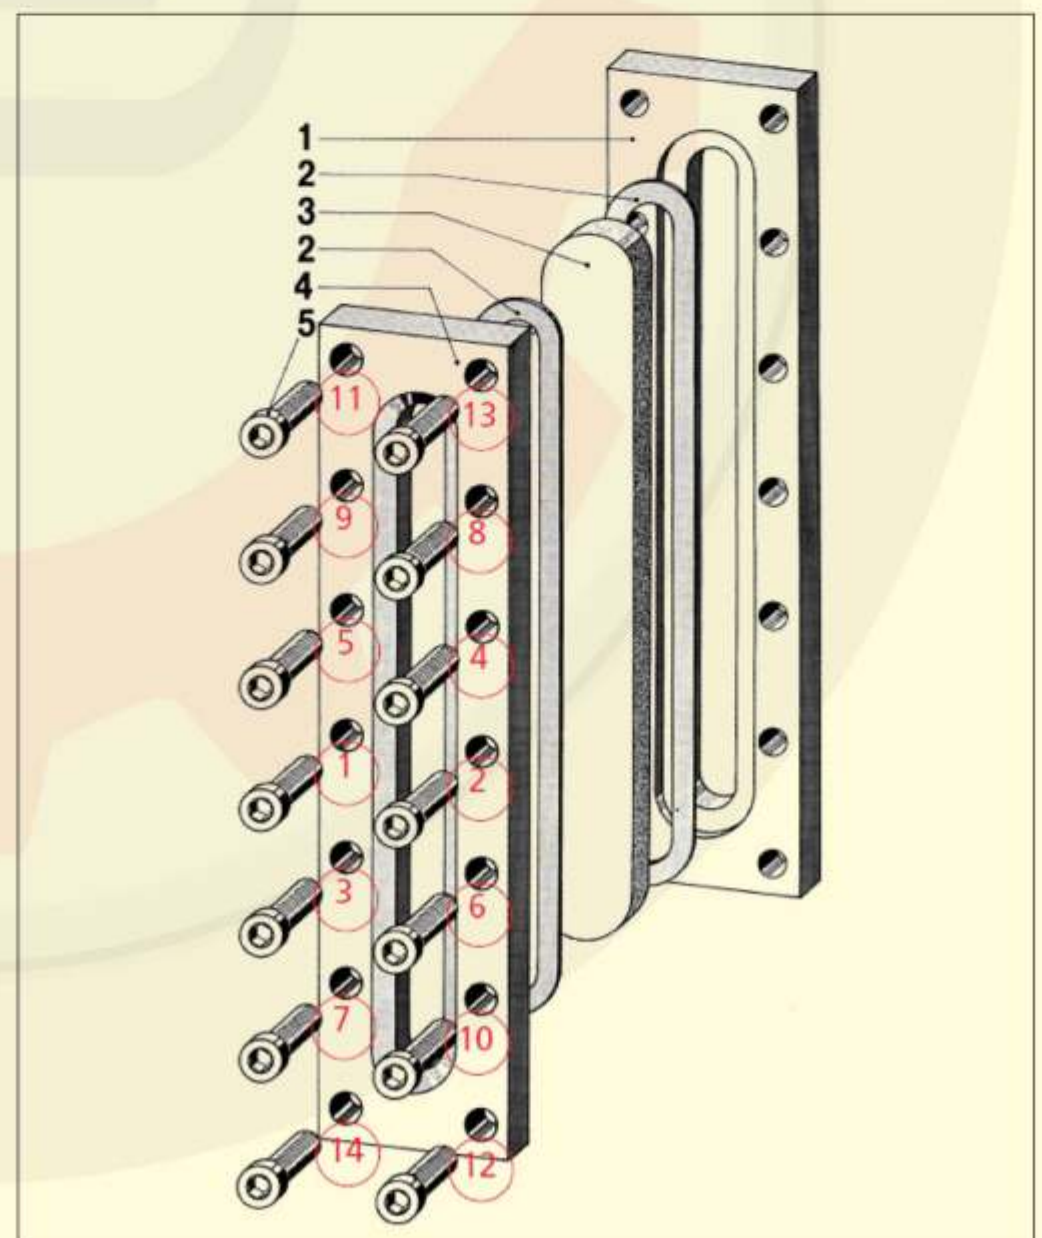

Exploded view rectangular sight glass

• Dimensions rectangular sight glass :

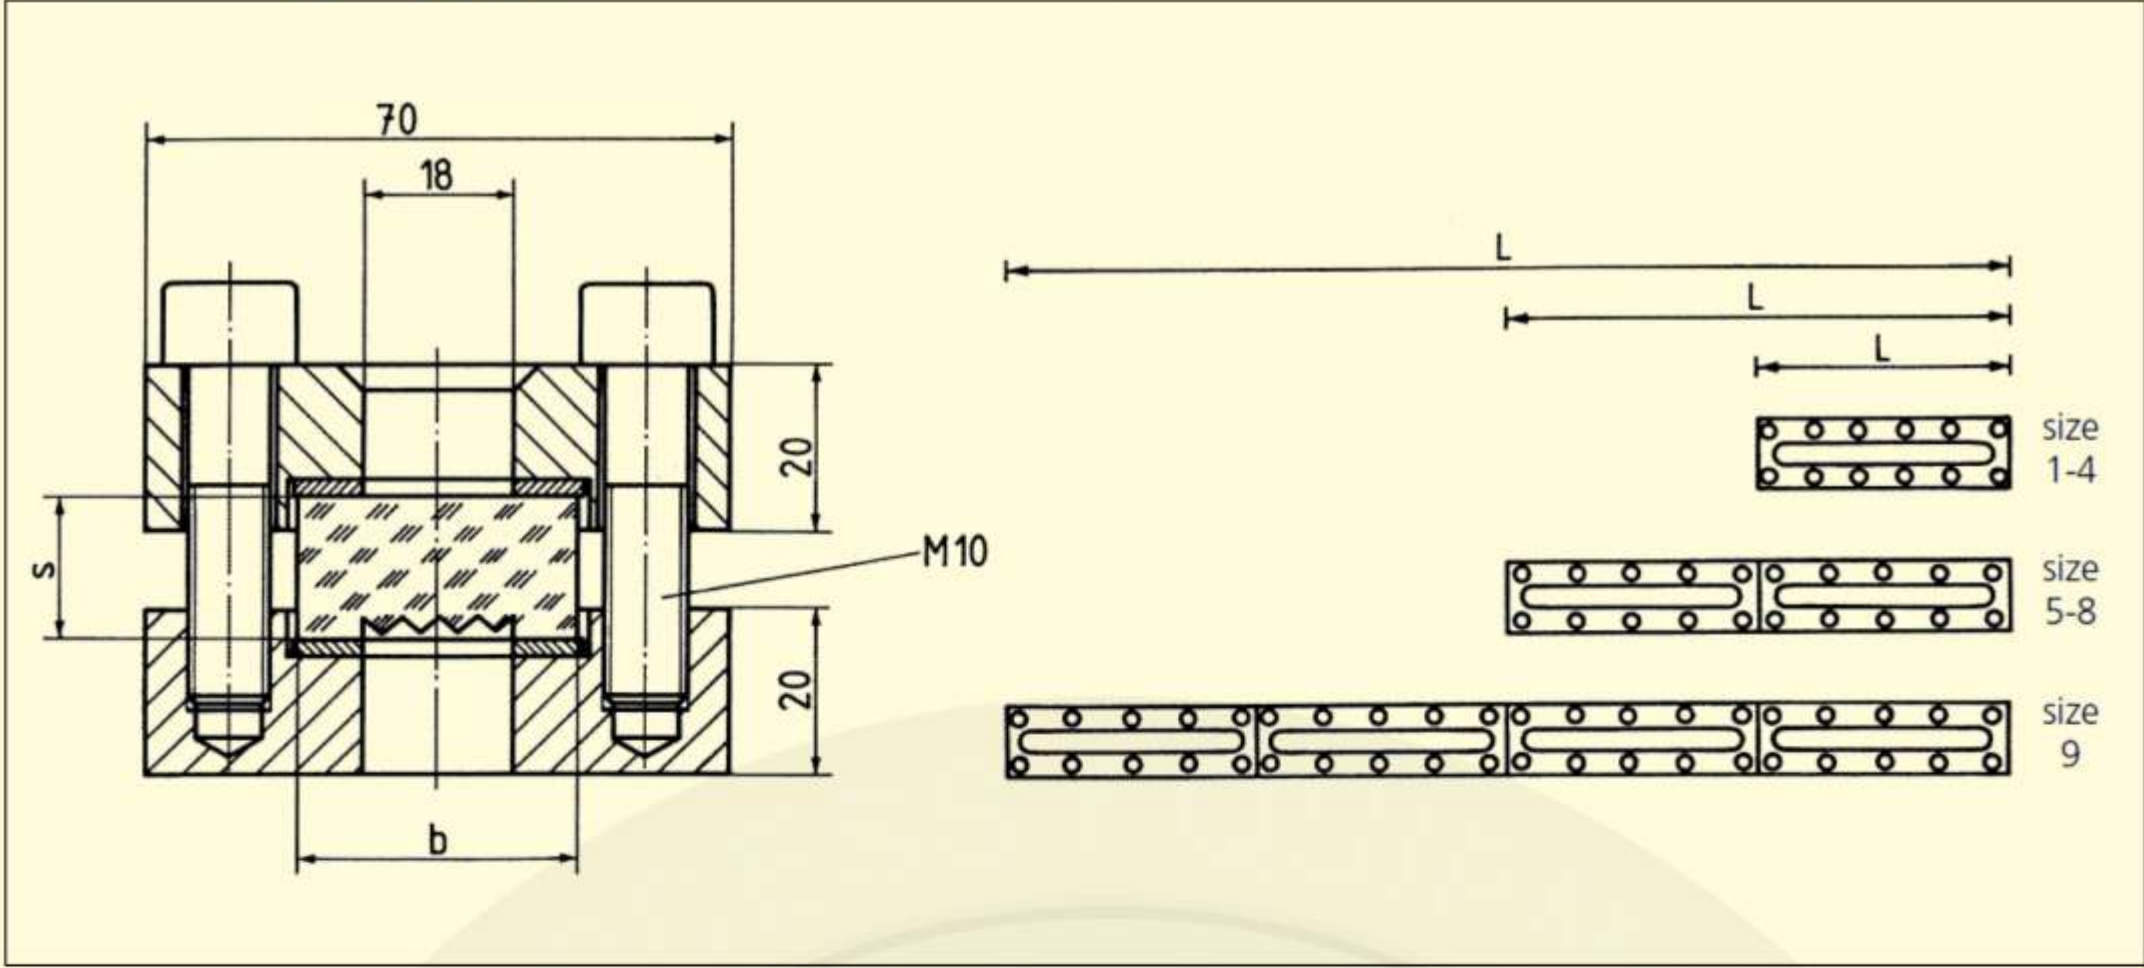

size		1	2	3	4	5	6	7	8	9
fitting	L	250	300	350	400	500	600	700	800	1000
sight glass plate *)	quantity	1	1	1	1	2	2	2	2	4
	/	220	280	320	370	220	280	320	370	220
	b	34	34	34	34	34	34	34	34	34
	s	17	17	17	17	17	17	17	17	17

*) Standard is reflex glass. Please specify in your order if you wish the optionally available transparent type glass.

- The lengths shown under L are the available standard sizes.
- Alternative versions in shape, size and material are available on request.
- External radiusing of the flanges 2 x R is available at extra cost.
- Rectangular sight glass are also available with closed base frame (see sketch on the right) for use as external liquid level indicator. In that case the unit is fed via pipes through holes in the base frame plate. The unit comes with such holes suitable drilled or tapped.

